


AQUALARM
ENGINE RAW WATER FLOW DETECTOR
FOR 2-1/2", 3", 3-1/2", 4"

Install the Flow Detector between the raw water sea strainer and the engine pump.
Make sure the FLOW DIRECTION ARROW corresponds with the engine raw water flow direction.
Remove a section of the raw water hose and place the hose over each end of the Flow Detector.
Be sure to use two hose clamps on each end to secure the hose.
The Flow Detector is a Normally Closed switch and needs to be connected through the ignition switch or other switching device.

Detector switching capacity: 12-32 VDC 0.5 Amps
Use 18 gauge wire for wire leads

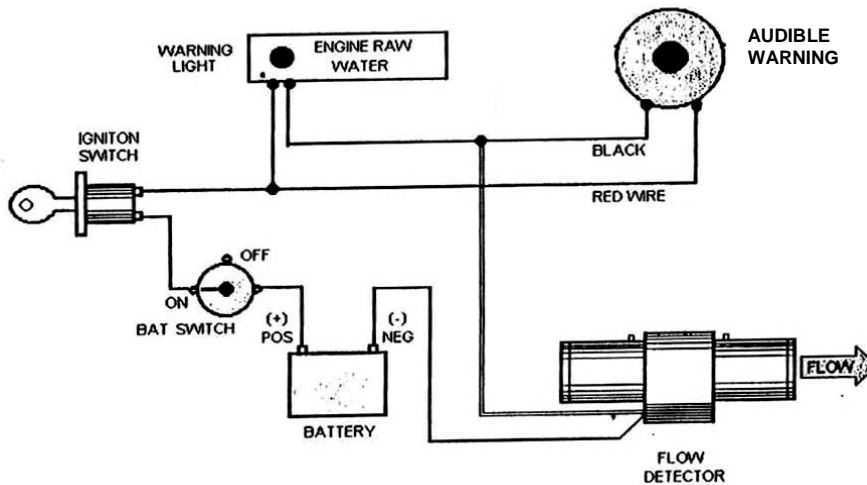

AQUALARM
ENGINE RAW WATER FLOW DETECTOR
FOR 2-1/2", 3", 3-1/2", 4"

Install the Flow Detector between the raw water sea strainer and the engine pump.
Make sure the FLOW DIRECTION ARROW corresponds with the engine raw water flow direction.
Remove a section of the raw water hose and place the hose over each end of the Flow Detector.
Be sure to use two hose clamps on each end to secure the hose.
The Flow Detector is a Normally Closed switch and needs to be connected through the ignition switch or other switching device.

Detector switching capacity: 12-32 VDC 0.5 Amps
Use 18 gauge wire for wire leads

