

COOLING WATER FLOW DETECTOR

Installation Instructions - 306 Series

Install the Flow Detector between the raw water sea Strainer and engine pump raw water intake. The Detector can be installed between the engine raw water Discharge and exhaust water overboard.
NOTE: Double clamp all hose connections and be sure the FLOW Detector arrow on the Detector corresponds with the engine raw water flow direction.

CAUTION: Do not exceed a 1/2 amp draw.