
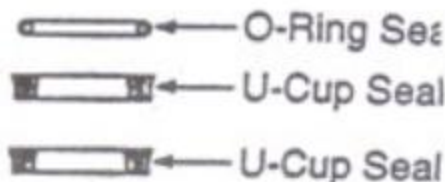


# Installation Instructions

## For U-Cup And O-Ring Seal Kit

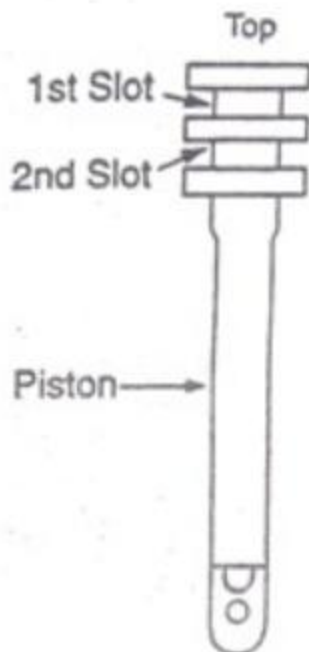

From the top of the piston, carefully using a flathead screwdriver, stretch a U-Cup seal over and past the first slot and into the second slot of the piston.

Then from the top of the piston stretch the other U-Cup seal over the top and into the first slot of the piston. Now stretch the O-Ring seal over and into the top U-Cup seal that is in the first slot of the piston. No O-Ring is needed in the U-Cup Seal in the second slot.

Refill reservoir only when tabs are in an up position. Use Insta Trim Biodegradable oil or any type of automatic transmission fluid to refill reservoir.